



## PROGRAMMING INSTRUCTIONS #101

NOTE - It is recommended that remotes be programmed with the use of a diagnostic tool, however if there are two working keys present this alternate procedure will sometimes add new remotes.

1. Insert the first working key into the ignition and turn to the ON position.  
DO NOT START THE VEHICLE.
2. Exit the vehicle and close the Driver door.
3. Mechanically LOCK the driver door using the second key.
4. Within 5 seconds of the previous step press UNLOCK (on the remote you wish to program) the number of times that corresponds with the memory position listed below.
  - Memory #1 - Press 1 time
  - Memory #2 - Press 2 times
  - Memory #3 - Press 3 times
  - Memory #4 - Press 4 times
5. Wait 5 more seconds and Press the UNLOCK button one more time.
6. Open the Driver door and turn the ignition OFF then press LOCK and UNLOCK together on the remote.
7. Test the remote for function.

NOTE - If programming more than one remote you must complete the entire procedure for each one you are programming. Each will need to go into a separate memory slot.

DISCLAIMER - AutoRemotes.ca accepts no responsibility for content, accuracy, or any other problems that may occur from the use of these programming instructions.