




PROGRAMMING INSTRUCTIONS #204

1. Access the Remtoe Transmitter Programming Terminal behind the glove box on the left hand side.

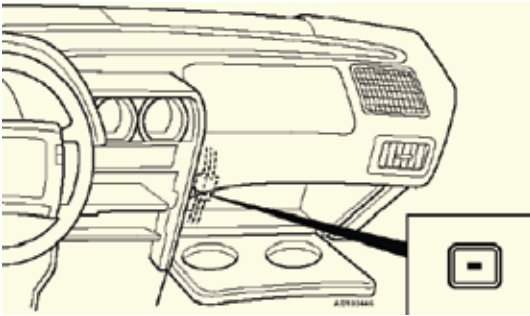

NOTE - the terminal may be taped to the wiring harness.

2. Turn ignition to the ON position.
3. With a suitable jumper wire connect the programming terminal to Ground.
4. Door locks should cycle LOCK to UNLOCK to confirm entry into programming mode.
5. Press ANY button on each transmitter to be programmed. The door locks should cycle after each remote has been accepted.
6. Remove jumper wire, turn ignition OFF and remove the key before testing each remote.

DISCLAIMER - AutoRemotes.ca accepts no responsibility for content, accuracy, or any other problems that may occur from the use of these programming instructions.