




PROGRAMMING INSTRUCTIONS #221

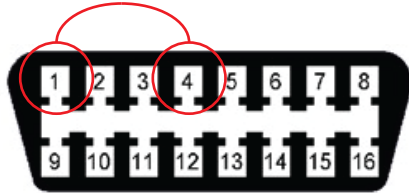

1. Disarm the vehicle's keyless entry system with an existing remote, if available.
2. With a suitable jumper wire, jump pins 1 and 4 on the Data Link Connector under the driver's dash.
3. Turn the ignition to the RUN position.
4. The vehicle will confirm that it is programming mode by flashing the Alarm LED light located at the top of the instrument panel.
5. Press the LOCK and UNLOCK buttons on the remote at the same time for about 15 seconds. The horn should beep three times letting you know the remote has been added.

NOTE - To program additional remotes, including any existing, working ones repeat Step 5. all remotes will need to be added within 60 seconds of the previous or the system will time-out.

6. Turn the ignition OFF and remove the jumper to exit programming mode before testing the remotes for function.

DISCLAIMER - AutoRemotes.ca accepts no responsibility for content, accuracy, or any other problems that may occur from the use of these programming instructions.