




## PROGRAMMING INSTRUCTIONS #222

You must obtain ALL remote transmitters you wish to program including all working ones. Any existing remote not used during programming will become inoperative.

1. Close all doors and access the Data Link Connector (DLC)

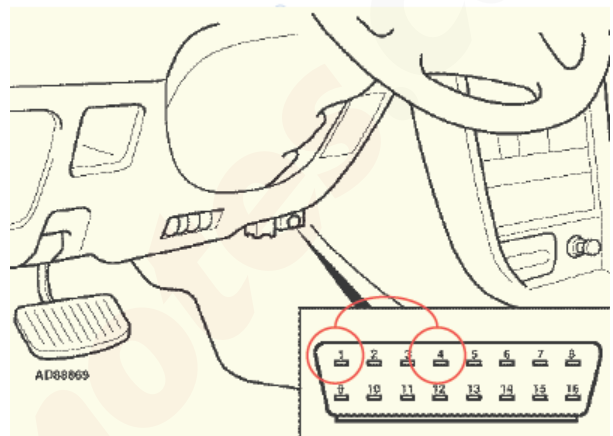

2. With a suitable jumper wire make a connection between Terminal 1 and Terminal 4 (or GROUND).
3. Turn key in the ignition to the ON position and back to OFF
4. Door locks should cycle LOCK to UNLOCK to confirm entry into programming mode.
4. PRESS ANY button on the first remote 3 times within 10 seconds and the door locks should cycle to confirm the remote has been accepted.

NOTE - Any additional remotes, including any existing, working ones will be added by repeating Step 4 above.

5. To EXIT programming mode remove jumper and wait 1 minute before testing each remote for function

DISCLAIMER - AutoRemotes.ca accepts no responsibility for content, accuracy, or any other problems that may occur from the use of these programming instructions.