




PROGRAMMING INSTRUCTIONS #223

You must obtain ALL remote transmitters you wish to program including all working ones. Any existing remote not used during programming will become inoperative.

1. Switch Ignition to the ON position.

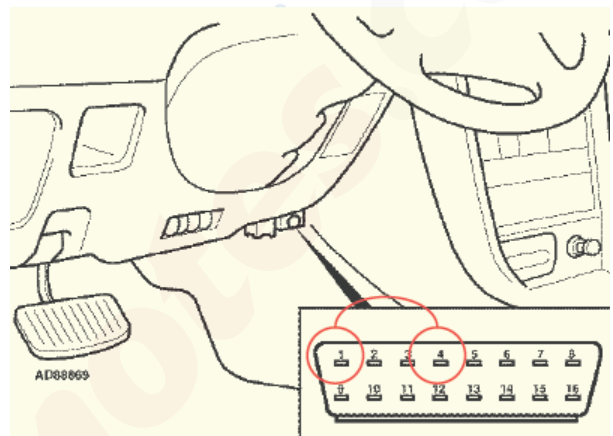

2. With a suitable jumper wire make a connection between Terminal 1 and Terminal 4 (or GROUND).
3. Door locks should cycle LOCK to UNLOCK to confirm entry into programming mode.
3. PRESS ANY button on each of the remotes to be programmed, including any existing working ones. The door locks should cycle after each remote has been added to confirm they have been added to the system.
4. To EXIT programming mode remove jumper and turn ignition OFF.

DISCLAIMER - AutoRemotes.ca accepts no responsibility for content, accuracy, or any other problems that may occur from the use of these programming instructions.