




PROGRAMMING INSTRUCTIONS #224

You must obtain ALL remote transmitters you wish to program including all working ones. Any existing remote not used during programming will become inoperative.

1. Close all doors to the vehicle. With a suitable jumper wire make a connection between Terminal 1 and Terminal 4 (or GROUND).

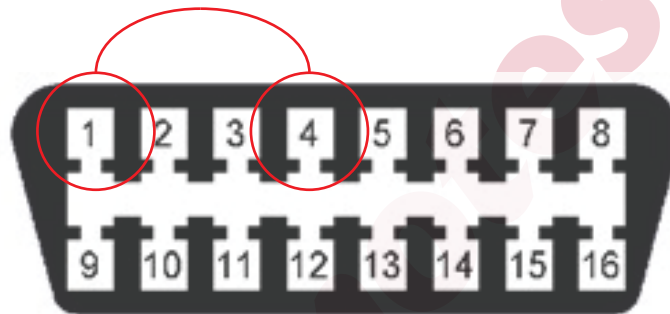

2. Cycle the ignition switch from ON to OFF. Door locks should cycle to confirm entry into programming mode.
3. PRESS ANY button on remote THREE times within 10 seconds. Door locks should cycle to confirm the remote has been accepted.

NOTE - ALL remotes including any working ones need to be programmed during step 3.

4. To EXIT programming mode remove jumper and turn ignition OFF.

DISCLAIMER - AutoRemotes.ca accepts no responsibility for content, accuracy, or any other problems that may occur from the use of these programming instructions.