



PROGRAMMING INSTRUCTIONS

#801

1. Locate the Keyless Entry Control Module just above the fuse panel under the driver's side dash. Find the BLACK and WHITE wires coming off the module. The wires are usually found not connected to anything, but in some cases the wires might lead to a valet switch.
2. Turn the ignition to the ON position and touch the BLACK and WHITE wires to each other 13 times. (if there is a valet switch you may also flip the switch 13 times.
3. PRESS the "1" button on the remote.
4. Turn OFF the ignition and press the "1" button again. If the door locks cycle continue to Step 5. If they do not, start over at Step 1.
5. Turn the ignition back to ON and this time touch the wires (or flip valet switch) 14 times.
6. Press the "2" button on the remote.
7. Turn OFF the ignition and press button "1". The doors should unlock, (if they locked press button "1" again) Then Press button "2". All the doors should unlock. If they don't start the procedure over at Step 5.
8. To exit programming mode remove the programming switch and make sure the black and white wires are disconnected.

DISCLAIMER - AutoRemotes.ca accepts no responsibility for content, accuracy, or any other problems that may occur from the use of these programming instructions.