



PROGRAMMING INSTRUCTIONS

#114

1. Move all Keyless Remotes out of range of vehicle. (10 to 15 feet)
2. Turn ignition key to the ON position.
3. Push the TRIP/ODO button on the DIC (Driver Info Center) twice.
4. Within 5 seconds, push & hold the FUEL INFO button on the DIC until the PKE light comes on and stays on.
5. Turn the ignition to the OFF position, but leave the key in the ignition. The PKE light will begin flashing.
6. Bring one Keyless Remote into range. The PKE light will stop flashing and stay on to show the code is stored. Move the Keyless Remote out of range. The PKE light will begin flashing indicating the system is ready for the next Keyless Remote.
7. If more than one Keyless Remote is being programmed, move the first Keyless Remote out of range and repeat step 6 for any additional Keyless Remotes. Up to three Keyless Remotes can be programmed.
8. To turn off the programming mode, simply remove the key from the ignition or turn the ignition switch on.
9. The programming mode will shut off after two minutes if.
 - A) You have not programmed any Keyless Remotes.
 - B) Removed the key from the ignition.
 - C) After three Keyless Remotes have been programmed.

DISCLAIMER - AutoRemotes.ca accepts no responsibility for content, accuracy, or any other problems that may occur from the use of these programming instructions.