



PROGRAMMING INSTRUCTIONS

#120

IMPORTANT: This procedure is not available when the maximum number of 4 fobs have been programmed. If 4 key fobs are programmed to this RCDLR and this method is attempted, the driver information center (DIC) will display, MAX FOBS LEARNED and the programming procedure will exit.

This procedure will add key fobs. Fobs will be numbered in sequence based on when they are programmed; if 2 fobs are currently programmed to the RCDLR, a fob programmed using this method will be numbered as Fob 3. This procedure requires that you have a known good key fob, a replacement key fob, and the vehicle's mechanical key.

1. The vehicle must be off.
2. Open rear compartment
3. Place a known key fob within the interior of the vehicle.
4. At the rear of the vehicle, insert the vehicle key into the rear compartment lock cylinder, located above the license plate and cycle the key 5 times within 5 seconds.
5. The DIC will display: READY FOR FOB X (X = fob 2, 3, or 4).
6. Place the replacement key fob in the glove box fob pocket with the buttons facing right.
7. A beep will occur and the DIC will display: READY FOR FOB X (X = fob 3 or 4) or MAX FOBS LEARNED.
8. If programming additional key fobs, repeat steps 5 and 6, or press the OFF/ACC portion of the ignition switch to exit programming mode.
9. Operate the active portion of each key fob in order to verify correct system operation.

NOTE - Remote start feature on fobs will only work on the fobs programmed into Memory Position #1 and #2. If adding a fob to Position #3 or #4 the remote start feature will NOT work.

NOTE - If you have no working fobs or wish to program new fobs into Memory Position #1 or #2 you must follow the erase procedure below.

1. The vehicle must be off.
2. Insert the key into the key lock cylinder located on the outside of drivers door.
3. Turn the key to the unlock position five times within ten seconds.
4. The (DIC) Driver Information Center displays REMOTE LEARN PENDING, PLEASE WAIT.
5. Wait for ten minutes until the DIC displays PRESS ENGINE START BUTTON TO LEARN and then press the ignition.
The DIC displays will again show REMOTE LEARN PENDING, PLEASE WAIT.
6. Repeat Step 5 two additional times. After the third time all previously known remotes will no longer work with the vehicle. Remaining remotes can be relearned during the next steps. The DIC display should now show READY FOR REMOTE #1
7. Place the new remote into the transmitter pocket with the buttons facing the front of the vehicle. (The transmitter pocket is inside the center console between the driver and front passenger seats). The storage area will need to be opened and the storage tray lifted up to access the transmitter pocket.
8. Press the ignition. When the remote is learned the DIC display will show that it is ready to program the next remote.
9. Remove the remote from the transmitter pocket and press unlock on the remote.
10. To program additional remotes, repeat Steps 7 through 9.
11. When all additional transmitters are programmed, press and hold the ignition for ten seconds to exit programming mode.

DISCLAIMER - AutoRemotes.ca accepts no responsibility for content, accuracy, or any other problems that may occur from the use of these programming instructions.