



PROGRAMMING INSTRUCTIONS #143

1. Turn ignition to the ON position.
2. In the trunk locate black wire coming from the trunk pull down assembly. Ground this wire. Door locks will cycle lock and unlock to confirm entry into programming mode.
3. Press the unlock button on the FIRST remote twice within 20 seconds of the previous step. Door locks will cycle lock and unlock to confirm the remote has been accepted.
4. At this time press the unlock button on the SECOND remote twice within 20 seconds of the previous step. Locks will cycle again to confirm the SECOND remote was accepted.

NOTE - If you do not have 2 remotes use remote the same remote for Step 2 and 3.