

## PROGRAMMING INSTRUCTIONS #151

NOTE - To complete the programming instructions listed below you you must have an existing, working fob and a key cut that works with the vehicle. This procedure also requires two people to complete. The detachable emergency key will be sent to you un-cut, you will need a locksmith or other professional to cut the key to work with your vehicle. Once completed, this procedure will will program the transponder chip as well as the remote functions.

- 1. The vehicle must be OFF.
- 2. Have an existing, working fob AND the new fob with you inside the vehicle.
- 3. Have a second person outside and insert a working key in the driver door lock and cycle LOCK to UNLOCK, 5 times within 5 seconds.
- 4. The DIC (Driver's Information Center) will display: READY FOR FOB X, where X can be 2, 3 or 4.
- 5. Place the new fob in the fob pocket with the buttons facing forward. The fob pocket is located between the driver and front passenger seat.
- 6. Once the fob is programmed a beep will sound.
- 7. The DIC will display: READY FOR FOB X, where X can be 3, 4 or MAX FOBS LEARNED.
- 8. Remove the fob from the pocket and press the UNLOCK button 2 times.
- 9. Operate the each button of the fob in order to verify correct system operation. NOTE To active the Remote Start button, (if present) press the Lock button first, then press the Remote Start button.

