



PROGRAMMING INSTRUCTIONS #152

NOTE - This procedure programs the remote keyless entry portion of the integrated remote/key system. A separate procedure is required to program the transponder key portion which may require a diagnostic scan tool.

1. Have all remotes present when programming. This procedure erases all known remotes and allows up to 4 to be re-programmed.
2. Turn ignition to the ON position and locate the DIC (Driver Information Center) controls.
3. Press the Trip/Fuel button until the DIC displays: CUSTOMIZE OPTIONS, then press the thumbwheel to enter.
4. Use the Thumbwheel to scroll to REMOTE KEY and then press to enter.
5. Select PROGRAM and then press to enter.
6. Follow the DIC screen prompts when instructed to press LOCK and UNLOCK at the same time on each remote to be programmed.
7. The system will sound two beeps to confirm the remote has been accepted
8. Turn ignition to OFF to exit programming mode.

DISCLAIMER - AutoRemotes.ca accepts no responsibility for content, accuracy, or any other problems that may occur from the use of these programming instructions.