



PROGRAMMING INSTRUCTIONS

#153

1. Obtain ALL remote transmitters, including any working ones.
2. To erase the Central Locking Control Module Memory, proceed as follows:
 - Access the Central Locking Control Module by removing the glove box.
 - Switch ignition to the ON position.
 - Press and Hold the program switch on the Control Module for 10 seconds.
 - Door locks will cycle Lock to Unlock to confirm erasure.
3. To program remote transmitter proceed as follows:
 - Switch ignition to the ON position.
 - Press and Release the program switch on the Control Module.
 - Within 10 seconds press any button on the first remote transmitter.
 - Door locks will cycle Lock to Unlock to confirm the first remote is accepted.
 - Within 10 seconds press any button on the second remote transmitter.
 - Door lock will cycle Lock to Unlock to confirm the second remote is accepted.
4. Repeat the procedure above for other remotes.
5. Switch ignition OFF
6. Wait a minimum of 15 seconds after the last remote has been programmed before testing.

DISCLAIMER - AutoRemotes.ca accepts no responsibility for content, accuracy, or any other problems that may occur from the use of these programming instructions.