



PROGRAMMING INSTRUCTIONS

#302

Note:

Entering the programming mode cancels all learned keyless remotes, so none of the previously programmed remotes will work. You must reprogram all of the keyless remotes once you are in the programming mode.

You must complete each step within 4 seconds of the previous step to keep the system from exiting the programming mode. You must program remotes within 10 seconds of each other

1. Turn ignition switch to ON (II)
2. Within 4 seconds press the LOCK or UNLOCK button on one of the remotes. (An unprogrammed remote can be used for this step.)
3. Within 4 seconds turn ignition switch to LOCK (0) position
4. Within 4 seconds turn the ignition switch to ON (II)
5. Repeat steps 2, 3 and 4 two more times using the same keyless remote used in step 2
6. Within 4 seconds press the LOCK or UNLOCK button on the same remote. Make sure the power door locks cycle to confirm you are in programming mode.
7. Within 10 seconds press the LOCK or UNLOCK button on same remote.
8. Within 10 seconds press the LOCK or UNLOCK button on all other remotes you want to program. Make sure door locks cycle after you push each remote button to confirm system has accepted the remote.
9. Turn the ignition switch to LOCK (0) to exit programming mode.
10. Test remote(s)

DISCLAIMER - AutoRemotes.ca accepts no responsibility for content, accuracy, or any other problems that may occur from the use of these programming instructions.