



PROGRAMMING INSTRUCTIONS #303

1. Start with the Driver's door OPEN.
2. Insert a working key into the ignition.
3. Cycle the ignition key in the ignition from the ACC position to the LOCK position 3 times in less than 3 seconds.
4. CLOSE then OPEN the driver's door twice within 10 seconds from the previous step.
5. With the driver door still open again cycle the key in the ignition from the ACC position to the LOCK position 3 times in less than 3 seconds.
6. CLOSE then OPEN the driver's door 1 time within 10 seconds from the previous step. The door locks should cycle LOCK or UNLOCK automatically to confirm entry into programming mode.
7. Within 20 seconds press the LOCK button on the first remote you wish to program. The door locks should cycle once to confirm this step.
8. Within 20 seconds press the UNLOCK button on the same remote and the door locks should cycle again confirming the remote has been added to the system.
9. Remove the key from the ignition and test functions on the remote.

NOTE - This system has 4 slots for remotes. Once the 5th remote is added the remote in slot #1 will be deleted. If an existing remote stops functioning after a new remote has been added start this procedure over to add the existing remote back in.

DISCLAIMER - AutoRemotes.ca accepts no responsibility for content, accuracy, or any other problems that may occur from the use of these programming instructions.