



## PROGRAMMING INSTRUCTIONS

# #304

NOTE - This system uses a stacking memory that allows up to 4 remotes to be programmed. If you try to program a 5th remote the remote in the 1st slot will be pushed out and no longer work.

1. Turn the ignition to ON (II) position.
2. Press and hold the Valet/Disarm button. Continue to hold the button pressed through the entire procedure or the programming will be cancelled. When the system gets into programming mode the LED on the upper steering column cover begins to flash. The button is located on the dashboard lower cover. Consult the owner's manual for exact location.
3. Press the top button on the remote that you are programming. The parking lights will flash to confirm the remote has been programmed.
4. Repeat Step 3 above to program any additional remotes. The parking lights will flash after each remote has been programmed.
5. Release the Valet/Disarm button, turn the ignition OFF and remove the key before testing remotes for function.