




PROGRAMMING INSTRUCTIONS #307

1. Remove Driver's side kick panel / lower 'A' pillar trim.
2. Turn vehicle ignition to ON position.
3. Proceed as follows:
 - Access central locking control module (pictured)
 - Using a suitable tool press and hold the green programming button until the interior lights illuminate.
 - Within 5 seconds, press and hold LOCK & UNLOCK buttons on the remote.
 - Release both buttons when the remote's LED light goes out, parking lights flash and siren chirps once.
4. Remove key from the ignition and test remote for function.

NOTE - To program any additional remotes you must repeat the the entire procedure.

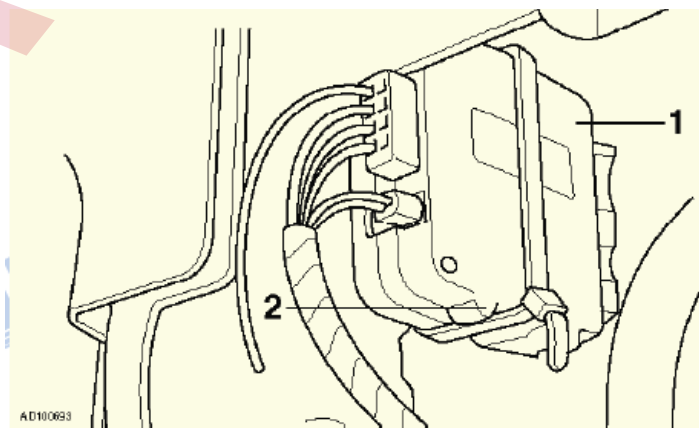

DISCLAIMER - AutoRemotes.ca accepts no responsibility for content, accuracy, or any other problems that may occur from the use of these programming instructions.