



PROGRAMMING INSTRUCTIONS #390

1. Remove key from ignition.
2. Close all doors.
3. Open driver side door and leave open.
4. Perform the following steps within 24 seconds.
 - a. Insert key in ignition.
 - b. Turn key to ON and OFF.
 - c. Repeat step b two more times.
 - d. Remove key.
 - e. Push driver door frame button three times (black rubber button located on driver door frame that tell the vehicle whether or not door is closed.)
5. Buzz sound, chime or doors will lock and unlock should be heard at this point signaling that the vehicle is now in programming mode. If not, wait 40 seconds and return to step 4.
6. All transmitters need to be programmed at this time, including the old ones. Push any button on the transmitter two times. A buzz sound, chime or doors locking and unlocking should be heard at this point signaling that the vehicle has accepted the new transmitter code. If there is only one transmitter, repeat this step two more times using the only transmitter. If there are two transmitters, repeat this step two more times using the second transmitter.
7. Push driver door frame button one time. Two buzz sounds, chimes or doors locking and unlocking 2 times should be heard at this point signaling successful programming.

DISCLAIMER - AutoRemotes.ca accepts no responsibility for content, accuracy, or any other problems that may occur from the use of these programming instructions.