



PROGRAMMING INSTRUCTIONS #392

1. Remove key from ignition.
2. Close all doors.
3. Open driver side door and leave open.
4. Insert key in ignition, Turn key to ON (as far as you can go without starting the engine) and OFF, Leave Key in Ignition.
5. Repeat step 4 two more times.
6. Close and then open the driver's door three times.
7. Buzz sound or chime should be heard at this point signaling that the vehicle is now in programming mode (the door locks also may cycle LOCK to UNLOCK). If not, wait 40 seconds and return to step 1.
8. All transmitters need to be programmed at this time, including the old ones. Push any button on a transmitter two times. A buzz sound or chime should be heard at this point signaling that the vehicle has accepted the new transmitter code (or the door locks may cycle LOCK to UNLOCK).

NOTE - this vehicle requires three remotes to be programmed to it. If you are programming only one remote, repeat Step 8 two more times with the first remote to fill all three spots. If there are two remotes you will do Step 8 once with the first remote and twice with the second. Finally if you are programming 3 remotes you complete Step 8 with all three remotes.

9. After all remotes are programmed, wait 15 seconds or until you hear four chimes signaling successful programming.

DISCLAIMER - AutoRemotes.ca accepts no responsibility for content, accuracy, or any other problems that may occur from the use of these programming instructions.