




## PROGRAMMING INSTRUCTIONS #476

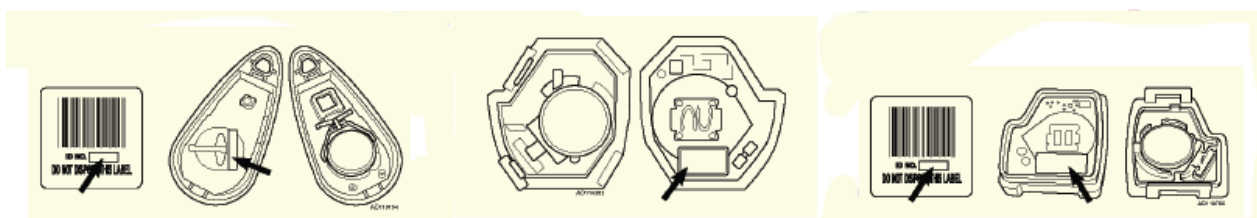

NOTE: This procedure requires the vehicle's alarm system be deactivated (if installed) before programming. This can be done by pressing the UNLOCK button on an existing working remote if one is available. Consult owner's manual if no working remote is present.

1. Locate and record the remote transmitter ID number from the remote being programmed. See pictures above for placement of ID number.
2. Open the driver's door, enter the vehicle and close the driver's door.
3. Within 15 seconds, TURN the key in the ignition to ON and then back to LOCK 10 times. If done correctly, you should hear the car emit an acoustic signal. This signal will continue to chirp and the interior lamp will flash until programming is complete. If an error occurs at any time during the procedure the signal will stop and the lamp will go out. To start over you will need to start again at Step 2.
4. Within 45 seconds:
  - a. Open the Driver Door
  - b. Close the Driver Door
  - c. Press the LOCK button on the door panel the same number of times as the first digit in the ID number of the remote you are programming.
  - d. When you have finished entering that digit press the UNLOCK button on the door panel.
  - e. Repeat Steps "c" and "d" above for each digit of the ID on the remote starting from the left.
  - f. Enter the code a second time. Starting from the first digit on the ID repeat Steps "c", "d" and "e". The car will sound an acoustic signal to let you know the programming is complete.
5. If programming more than one remote you will need to complete Steps 4c to 4f above.
6. Open the door and test the remotes for function.

DISCLAIMER - AutoRemotes.ca accepts no responsibility for content, accuracy, or any other problems that may occur from the use of these programming instructions.