



PROGRAMMING INSTRUCTIONS #762

1. Start with key out of ignition, driver's door is open and unlocked while all other doors are closed.
2. Perform this step within five seconds:
 - a. Insert key into the ignition (DO NOT TURN) and pull key out.
 - b. Repeat
3. Perform these steps within 40 seconds:
 - a. Close then open driver's door
 - b. Repeat
 - c. Insert key into the ignition (DO NOT TURN) and pull key out.
4. Perform these steps within 40 seconds:
 - a. Close then open driver's door
 - b. Repeat
 - c. Insert the key into the ignition and leave the key in the ignition.
 - d. Turn the ignition ON (as far as you can go without cranking the engine), then turn it back to OFF.
 - e. Remove key from ignition.
5. Within three seconds, the power door locks should cycle automatically indicating successful entry into programming mode. Return to step 1 if the locks do not cycle at this point.
6. Perform these steps within 40 seconds:
 - a. Press the lock and unlock buttons on the remote simultaneously for one second.
 - b. Immediately after letting go of the lock and unlock buttons, press the lock button by itself and hold for two seconds. Within three seconds, the door locks should cycle once indicating successful programming. If the door locks do not cycle, or cycle twice repeat steps A and B in step six as your remote has not been accepted.
 - c. Repeat steps A and B in step six for each new remote
7. Open driver's door.

DISCLAIMER - AutoRemotes.ca accepts no responsibility for content, accuracy, or any other problems that may occur from the use of these programming instructions.