

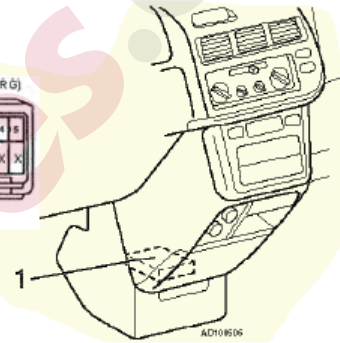


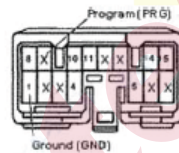

PROGRAMMING INSTRUCTIONS #781

1. Make sure the key is removed from the ignition.
2. Locate the Central Locking Control Module under the center console. (Figure 1)

3. With the multi-plug harness still connected jump terminals 1 and 9. The system will cycle the door locks one time to confirm you are in programming mode.

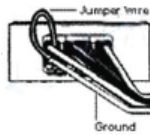

4. Press ANY button on the first remote you wish to program. The system should confirm the remote was accepted by cycling the door locks one time.
5. Repeat step 4 for a second remote that needs to be programmed.
6. To exit programming mode remove the jumper wire.

DISCLAIMER - AutoRemotes.ca accepts no responsibility for content, accuracy, or any other problems that may occur from the use of these programming instructions.