



## PROGRAMMING INSTRUCTIONS

# #787

1. Start with the key out of the ignition, drivers door is open all others closed and drivers door is unlocked.
2. Perform these steps within 5 seconds.
  - A. Insert the key into the ignition (Do NOT Turn) Pull key out.
  - B. Insert the key into the ignition (Do NOT Turn) Pull key out.
3. Perform these steps within 40 seconds.
  - A. Close then open the drivers door.
  - B. Close then open the drivers door.
  - C. Insert the key into the ignition (Do NOT Turn) Pull key out.
4. Perform these steps within 40 seconds.
  - A. Close then open the drivers door.
  - B. Close then open the drivers door.
  - C. Insert the key into ignition and leave it in ignition.
  - D. Close the drivers door.
  - E. Turn the ignition to ON (Do NOT Start) then back to OFF.
  - F. Remove the key from the ignition.
5. Within 3 seconds, the power door locks should lock then unlock automatically indicating successful entry into programming mode.  
Return to step 1 if the locks do not cycle at this point.
6. Perform these steps within 40 seconds.
  - A. Press the lock and unlock buttons on the remote simultaneously for 1.5 seconds.
  - B. Immediately after letting go of the lock and unlock buttons, Press the lock button by itself and hold for 2 seconds. Within 3 seconds, the door locks should lock and then unlock once indicating successful programming. If the door locks cycle twice, repeat steps A and B in step 6 as the remote was not accepted.
  - C. Repeat steps A and B in step 6 for each new remote.
7. Open drivers door.

DISCLAIMER - AutoRemotes.ca accepts no responsibility for content, accuracy, or any other problems that may occur from the use of these programming instructions.