




PROGRAMMING INSTRUCTIONS #788

1. Start with Key out of ignition.
2. Locate bulb failure warning module in trunk near LH hinge and disconnect multi-plug.
3. Jump bulb failure warning module harness multi-plug terminals 2 and 10: System should now lock and unlock vehicle once and activate trunk lock to confirm.

NOTE - If there is no wire in terminal 10 then jump 11 and 12.

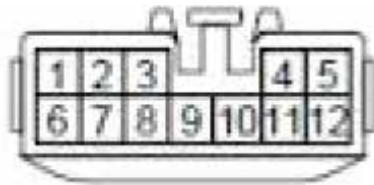

4. Press any button on keyless remote: System should now lock and unlock vehicle once and activate trunk lock to confirm.
5. Press any button on second keyless remote if applicable: System should now lock and unlock vehicle once and activate trunk lock to confirm.
6. To exit programming mode remove jumper wire from multi-plug, reconnect multi-plug to original connection.

7. Test remote(s).

** A maximum of 2 keyless remotes can be programmed.

** Programming a keyless remote erases all other keyless remotes. Both keyless remotes must be programmed at the same time.

DISCLAIMER - AutoRemotes.ca accepts no responsibility for content, accuracy, or any other problems that may occur from the use of these programming instructions.