



PROGRAMMING INSTRUCTIONS #121

DATA LINK CONNECTOR



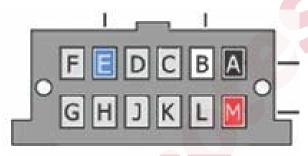

- 2. Connect cavity G with cavity A using a fused jumper wire. Your vehicle will respond by locking and unlocking the door locks within 2 seconds.
- 3. Press any button 3 times in successtion on first remote to be programmed. Locks will lock and unlock verifying remote was programmed.
- 4. Press any button 3 times in succession on second remote to be programmed if applicable. Locks will lock and unlock to verify remote was programmed.
- 5. Remove jumper wire and test remote(s)

DISCLAIMER - AutoRemotes.ca accepts no responsibility for content, accuracy, or any other problems that may occur from the use of these programming instructions.