



## PROGRAMMING INSTRUCTIONS #308

NOTE - A matched set of ROM chips is required to add a remote to an existing system. Only one remote can be programmed at a time.

1. Unscrew the back of the remote and carefully replace the chip. It is held in place by a brown plastic frame. The frame can be opened by grabbing the thumb grips on the opposing sides and pulling in the direction of the chip. The chip is very fragile, be careful not to damage.
2. Locate the control module. Most times it is located under the driver's seat. Find the chip compartment on the bottom of the module.
3. Open the cover insert the matching chip into the programming frame.
4. Locate the reset button. It is very small and positioned near similar looking diodes. Press the button for 1 second.
5. Close the cover and re-install the control unit.

fig 1


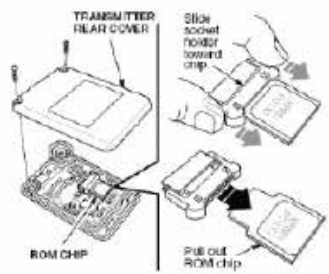


fig 2

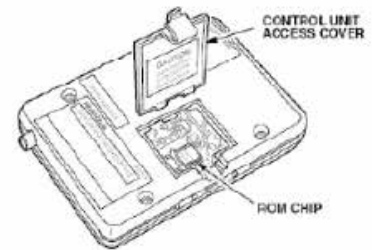

DISCLAIMER - AutoRemotes.ca accepts no responsibility for content, accuracy, or any other problems that may occur from the use of these programming instructions.