




## PROGRAMMING INSTRUCTIONS #205

1. Remove the center fascia air vent, with traction control switch (if present).
2. Disconnect the traction control vent multi-plug (black).

NOTE - If the vehicle is not equipped with traction control the multi-plug is attached to a dummy socket in the back of the air vent housing.

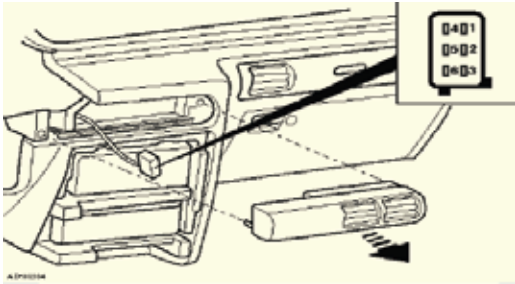

3. Turn the ignition to the ON position.
4. Jump traction control switch harness multi-plug terminal #4 to a ground using a suitable jumper wire.
5. The door locks should cycle LOCK to UNLOCK indicating the vehicle is in programming mode.
6. Press ANY button on each remote you wish to program, including any existing working ones. Door locks should cycle after each remote has been added to confirm they have been added.
7. Remove jumper wire, turn OFF the ignition and remove the key before testing each remote for function.

DISCLAIMER - AutoRemotes.ca accepts no responsibility for content, accuracy, or any other problems that may occur from the use of these programming instructions.