





PROGRAMMING INSTRUCTIONS #780

1. Make sure key is not in the ignition
2. Remove the 3x5 black panel that hold the mirror control switch. Do not pry out the mirror control switch itself, instead pry out the larger black panel that houses the mirror control switch.

3. Disconnect the mirror control switch from the harness. The harness plugs directly behind the mirror control switch. Grab the harness by the thumb release tab to disconnect.

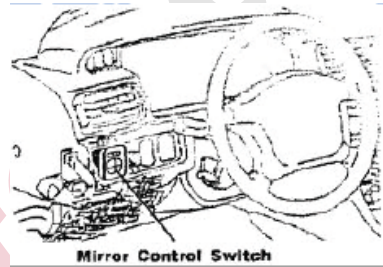

4. Using a suitable jumper wire connect the wire in terminal 2 to terminal 10. The vehicle confirms programming mode by cycling the power door locks.

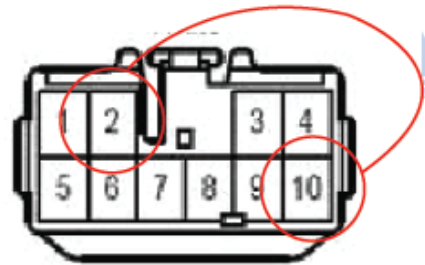

5. Press and release any button on the remote. The vehicle confirms the remote was accepted by cycling the power door locks.

NOTE - Repeat Step 5 to program any additional remotes including any previous working ones.

6. Disconnect the jumper wire to exit programming mode.

DISCLAIMER - AutoRemotes.ca accepts no responsibility for content, accuracy, or any other problems that may occur from the use of these programming instructions.